






TAV Coupling equipment

Operating and maintenance instructions

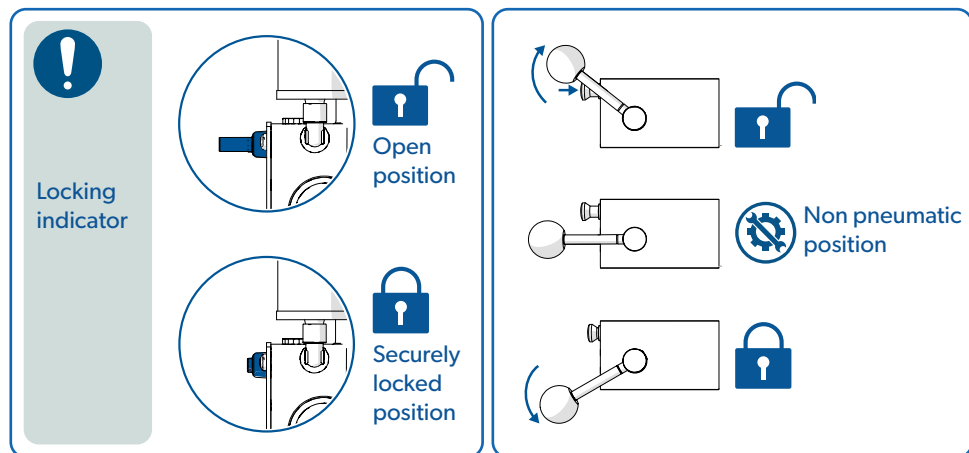

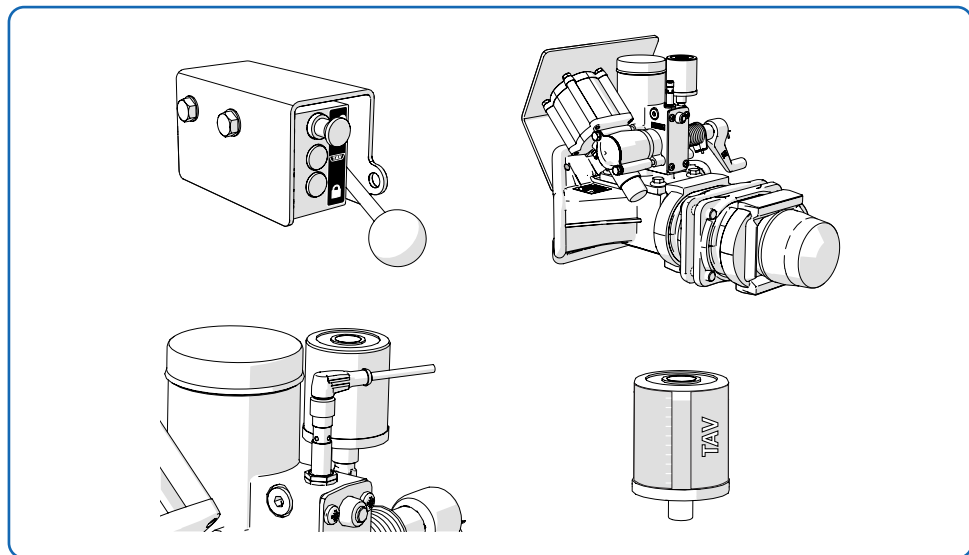

CONNECT

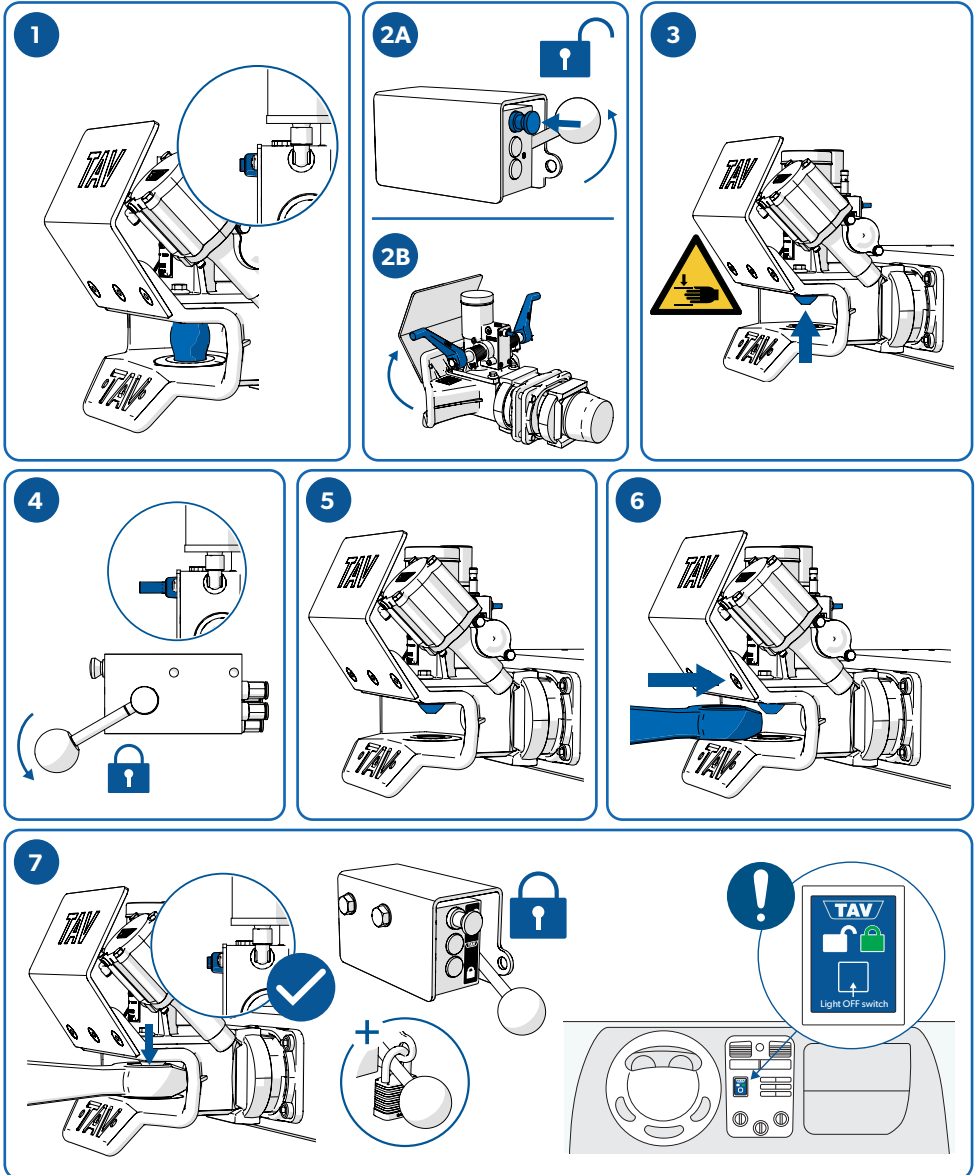



DISCONNECT

1

2A

2B

3

4




5

Firmly tap the crank to release the coupling head.

6



WEEKLY SERVICE

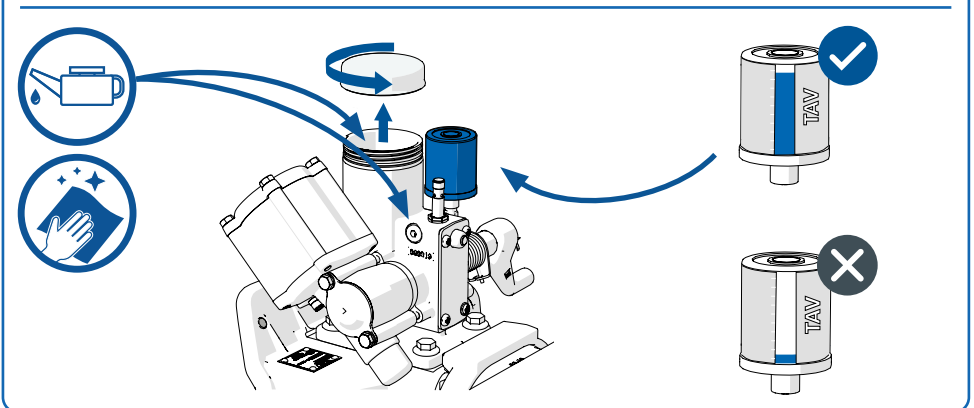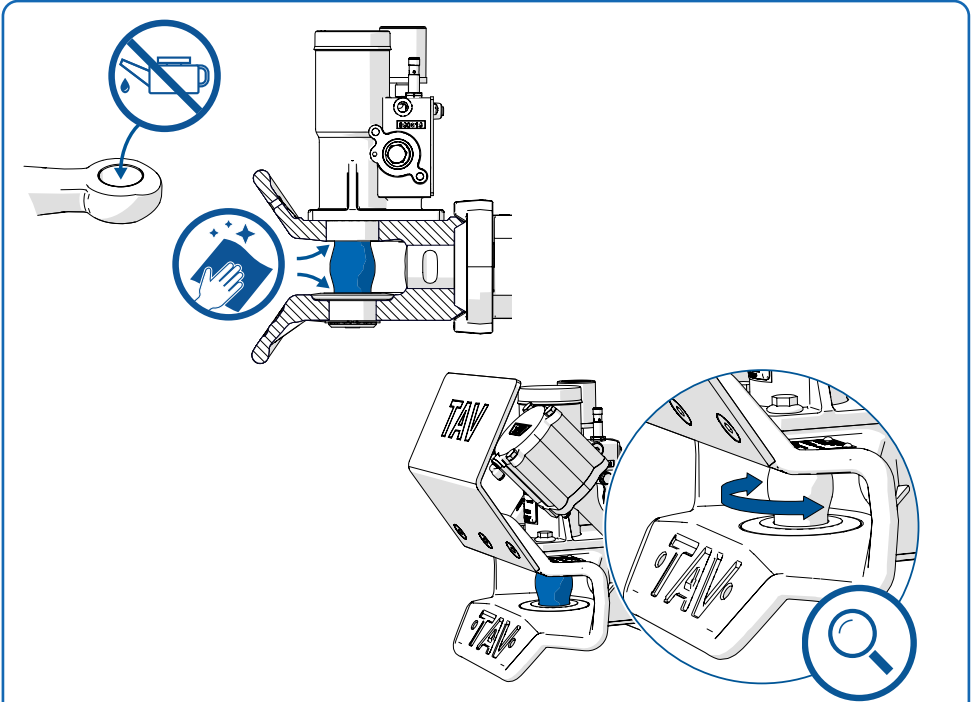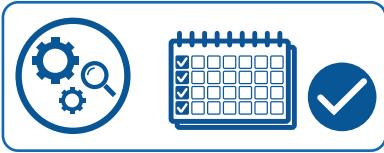





ANNUAL SERVICE




1

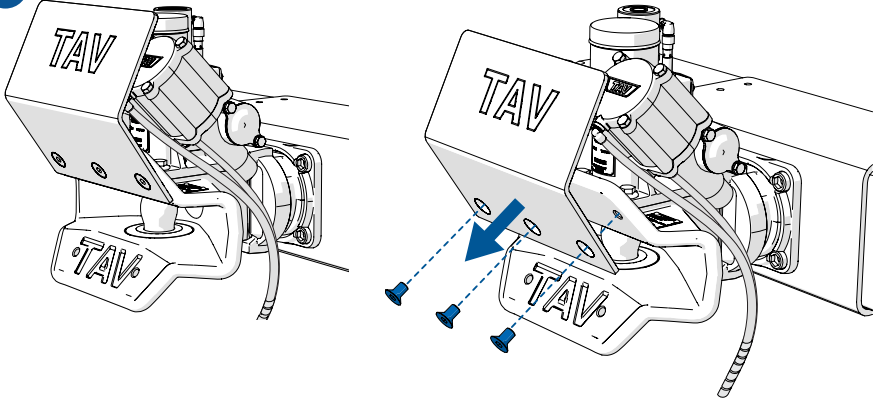

2












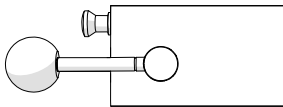







Non pneumatic
mode

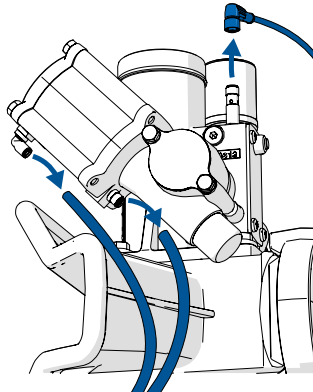


OFF

3

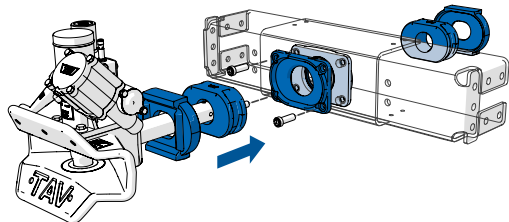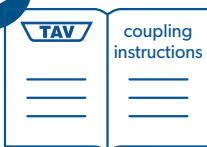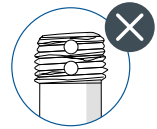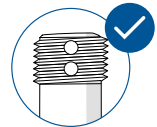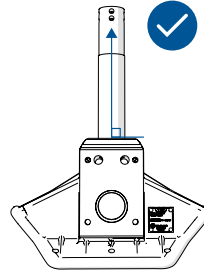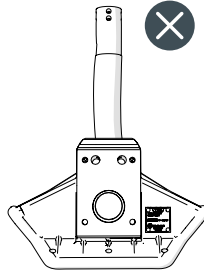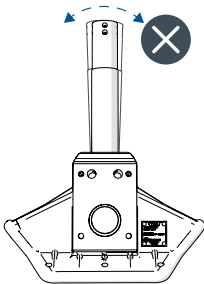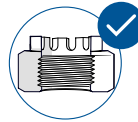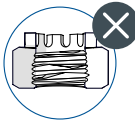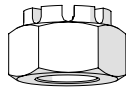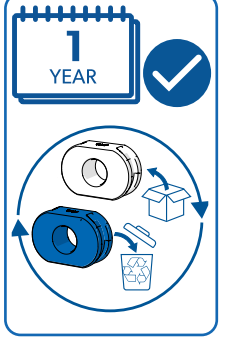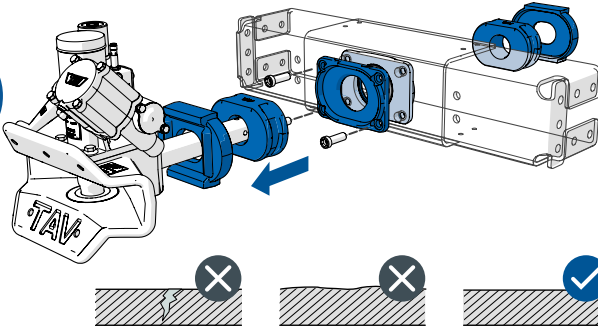


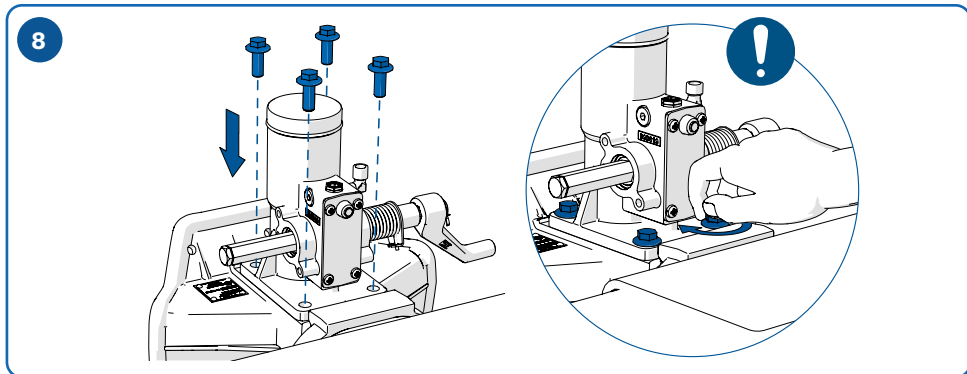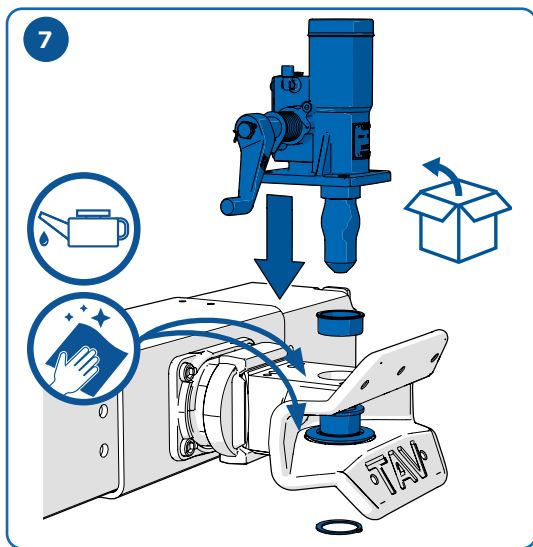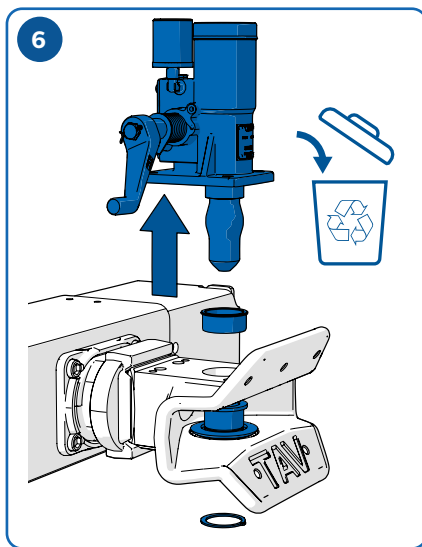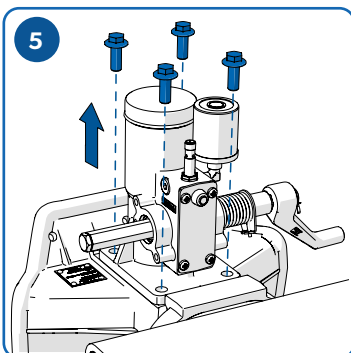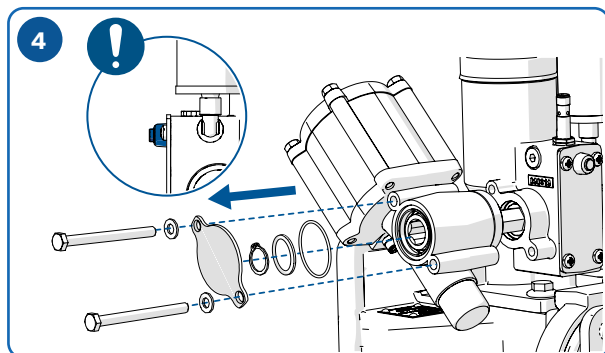

9

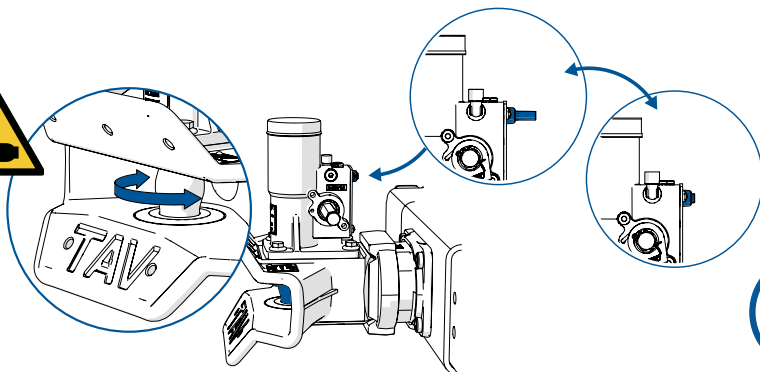



10

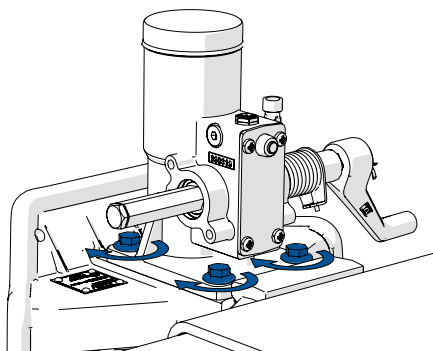


100Nm
Tighten with
torque wrench



11





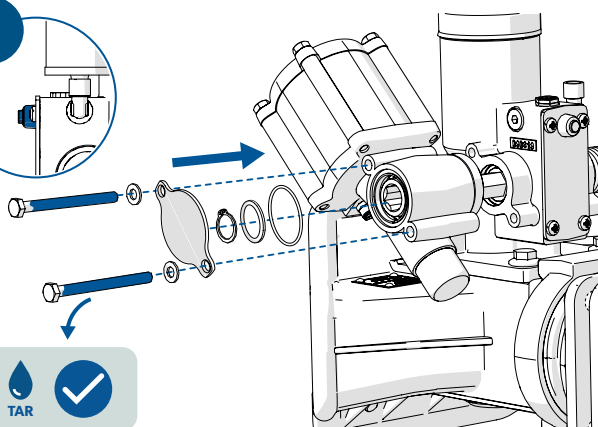
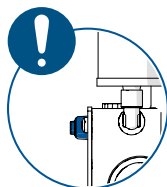





20Nm
Tighten with
torque wrench

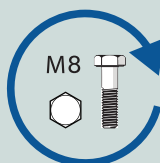

TAR



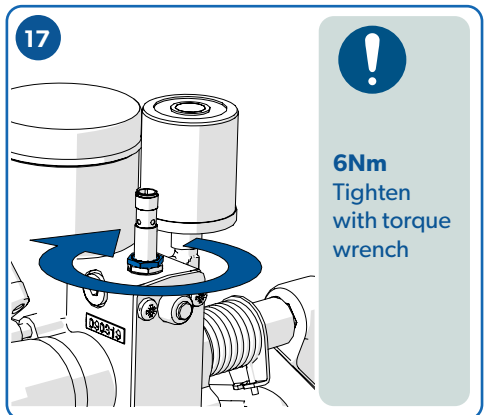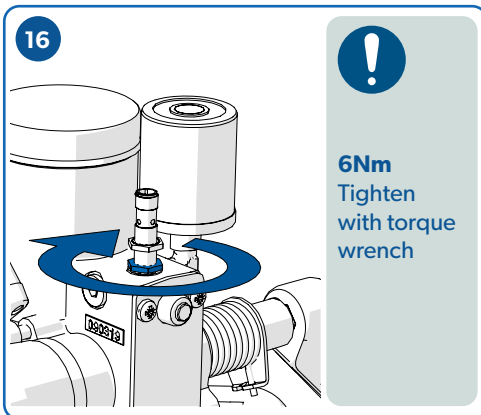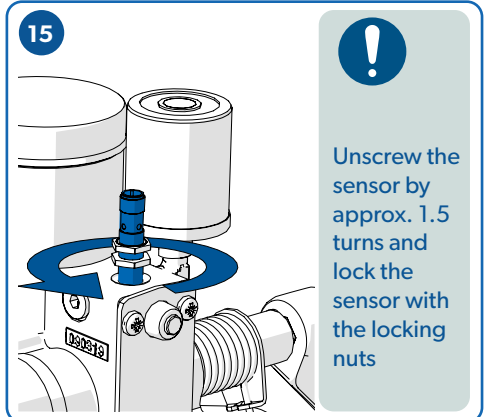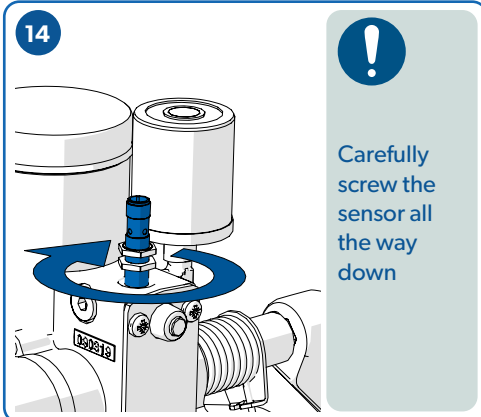
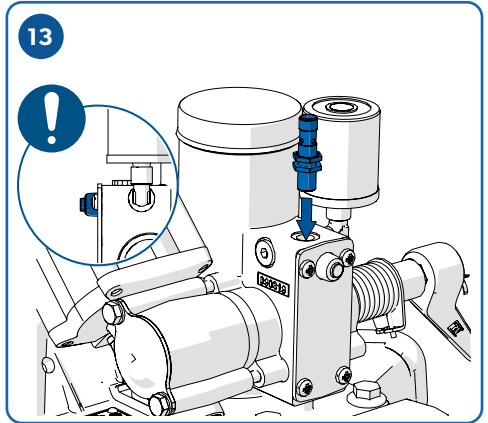
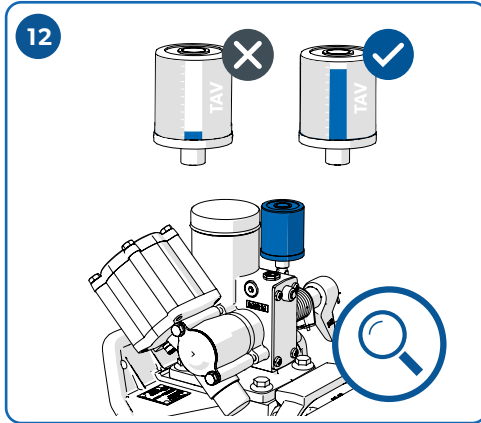


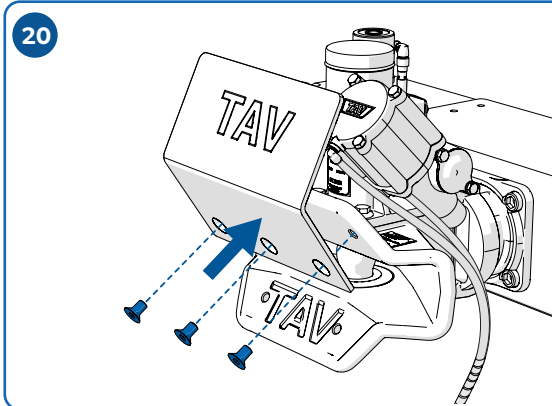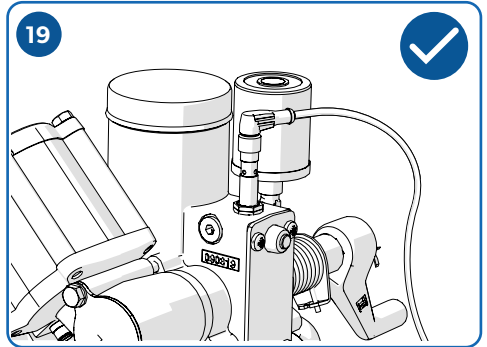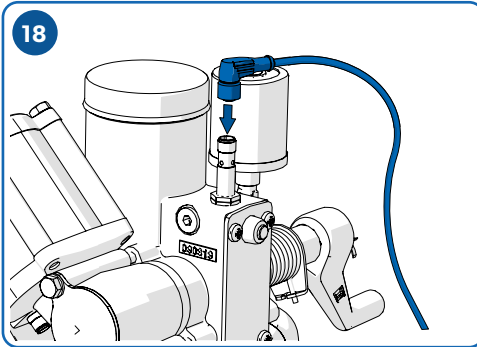

45Nm
Tighten with torque
wrench






Min. 8 BAR
Max 10 BAR

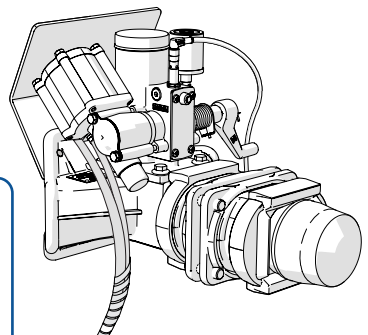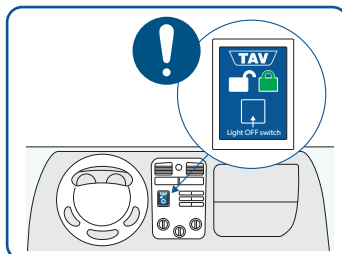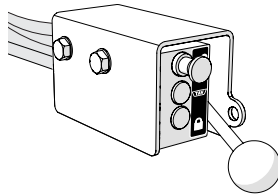





max 5.0mm

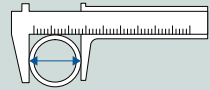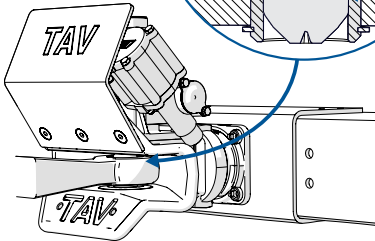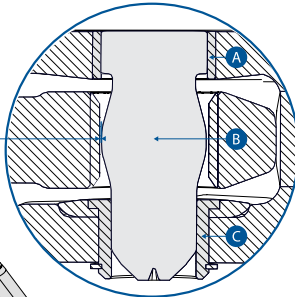




Ø max 51.5mm



Ø max 40.5mm

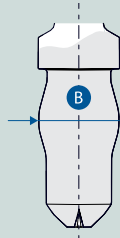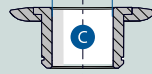


Ø min 47mm

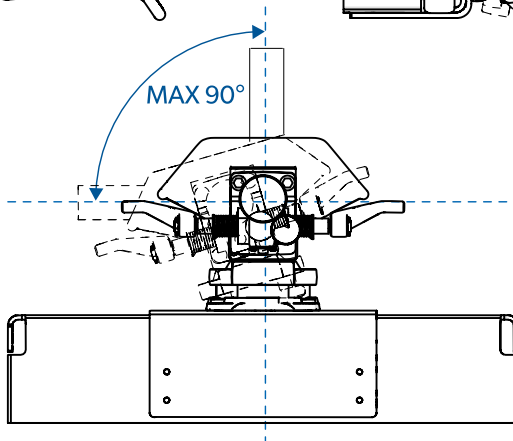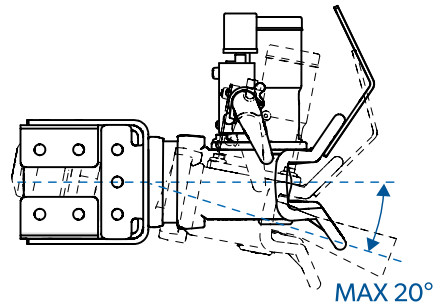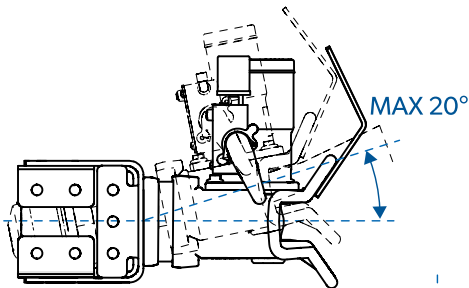




TAV5100


1

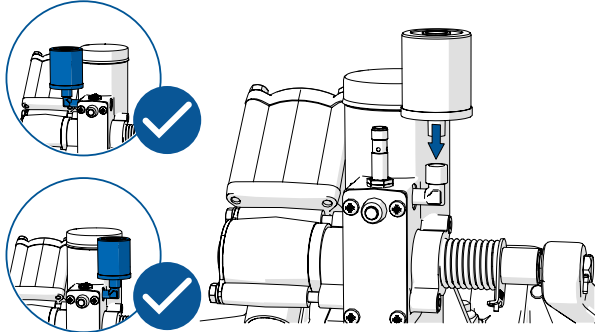

2

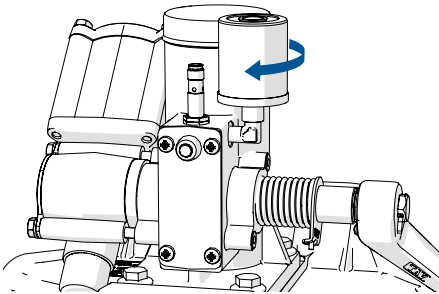

3

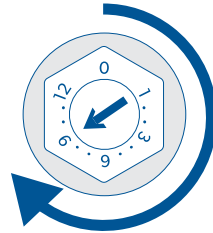

Recommended setting between 6 - 9

4

