




TAV5850 Servo kit

Remote control system installation instructions



TAV5850

TAV5800

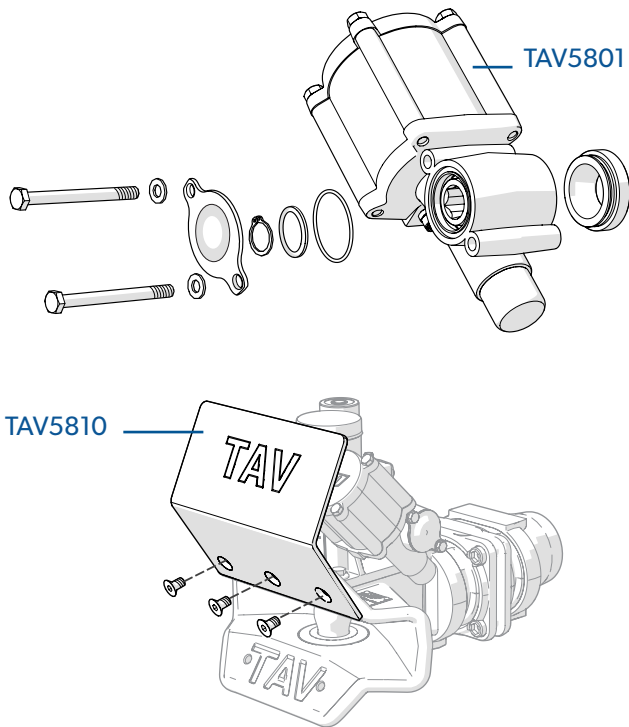

TAV5900


TAV5901

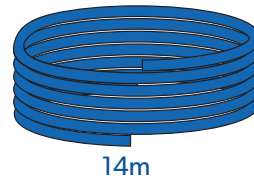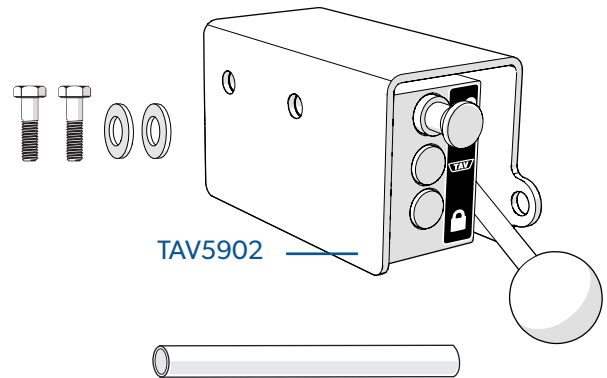


14m




2m

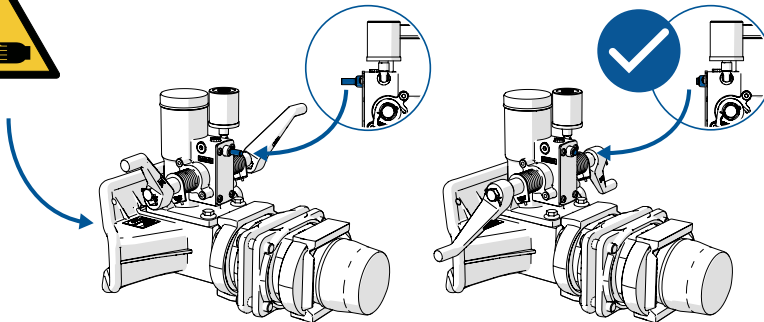

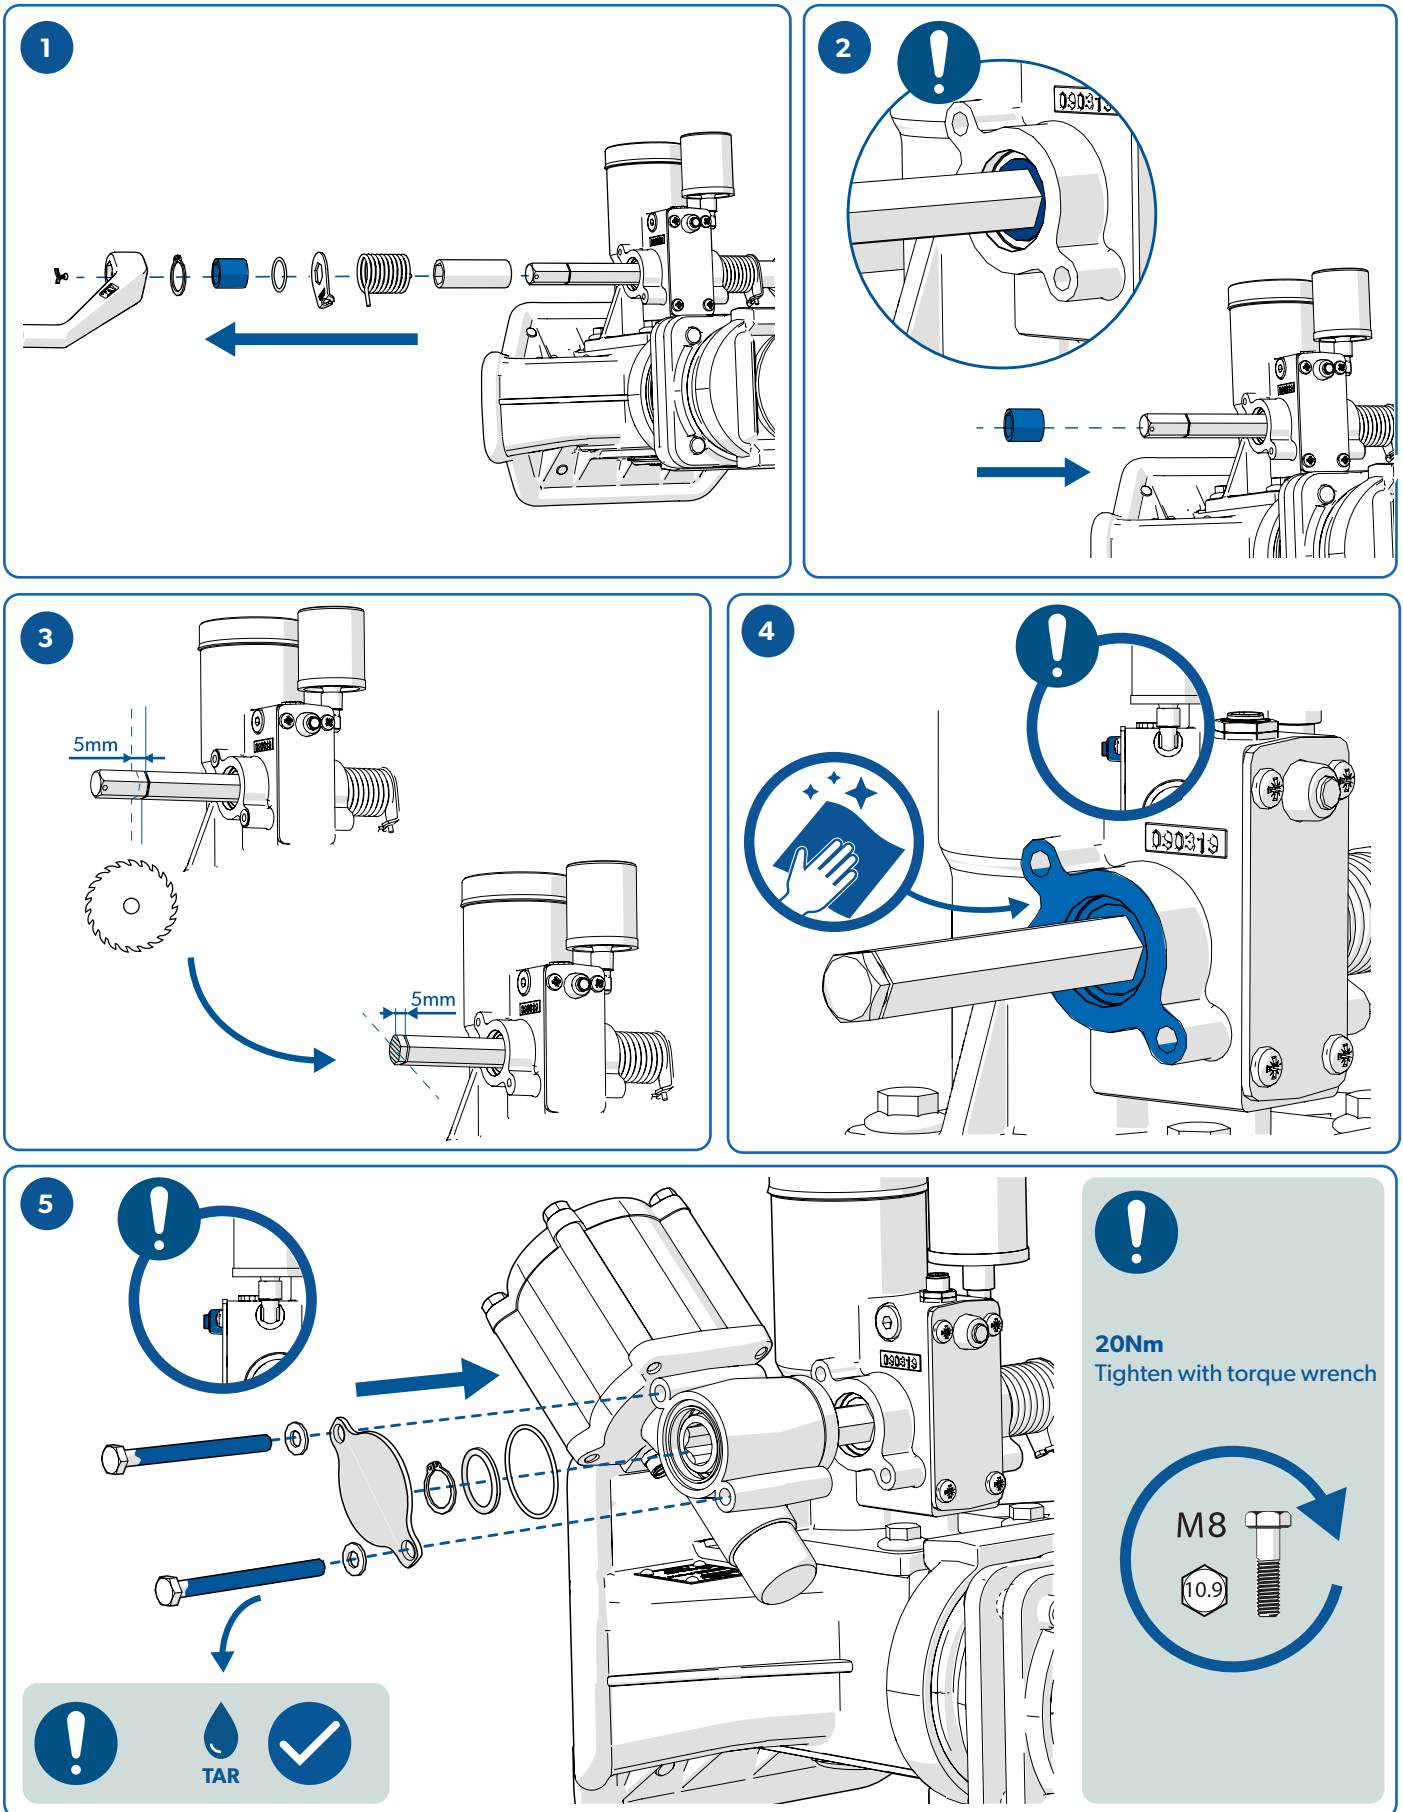




6

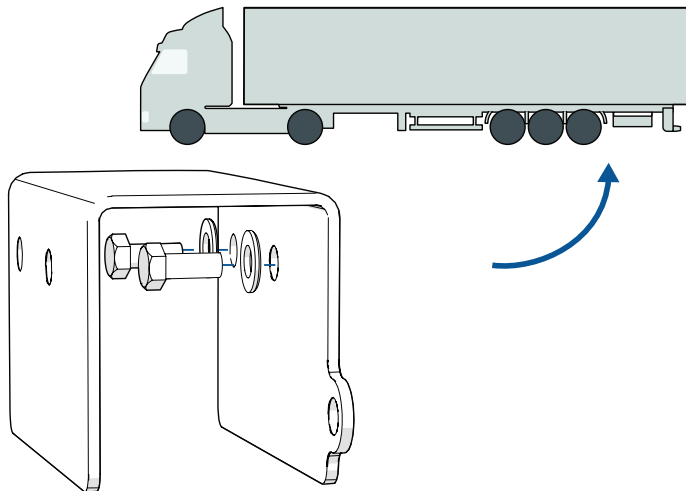


If the actuating device for opening the coupling under remote control is mounted externally on the vehicle it shall be possible to oversee the area between the coupled vehicles, but shall not be necessary, however, to enter this area in order to operate it.


7

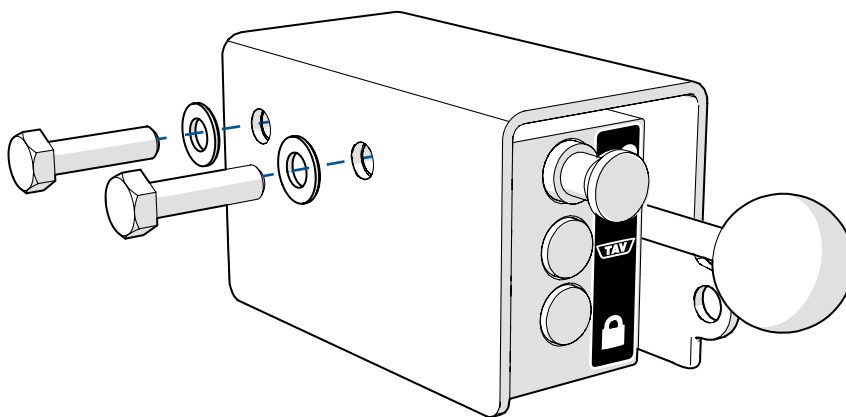

17Nm
Tighten with torque wrench

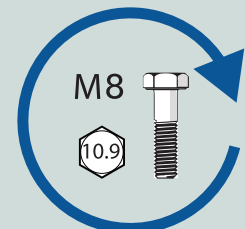

8

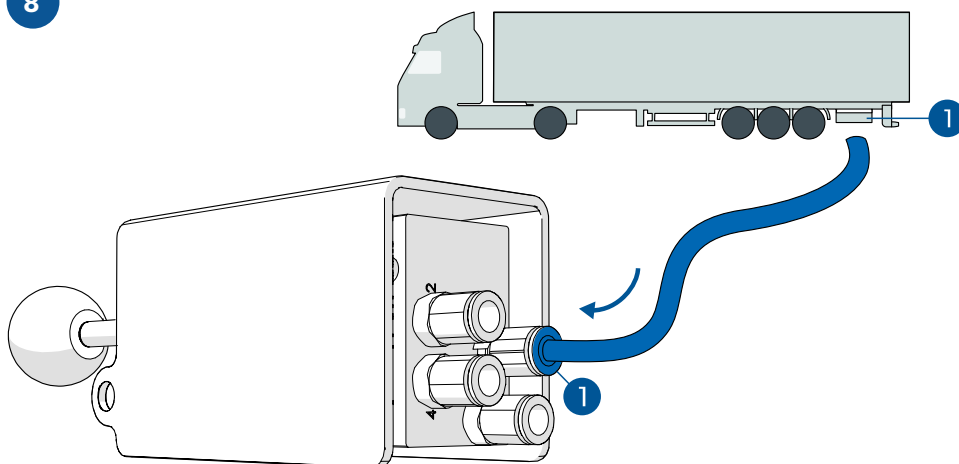

Min. 8 BAR
Max 10 BAR

